
TS0035UK03

RL Series

Two Stage Light Oil Burners

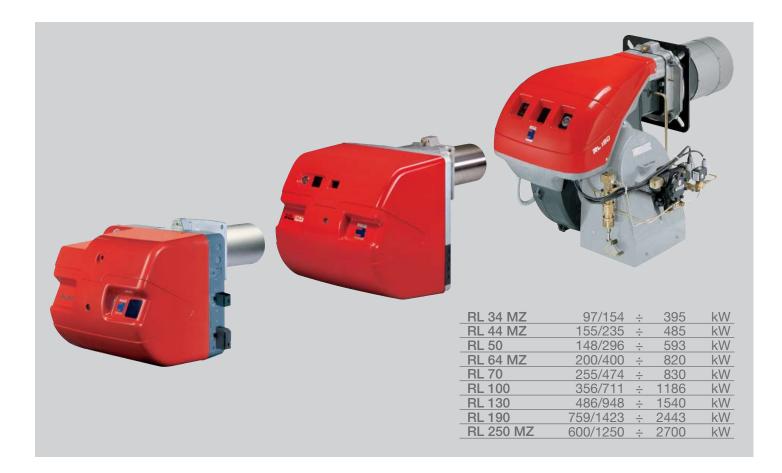

The RL series of burners covers a firing range from 154 to 2700 kW, and it has been designed for use in low or medium temperature hot water boilers, hot air or steam boilers, diathermic oil boilers.

All models are suitable for combustion of light oil and blend of light oil and biodiesel up to 5%.

Operation is "two stage"; the burners are fitted with a microprocessor-based control panel, which supplies indication of burner status and fault causes.

Optimisation of sound emissions is guaranteed by the special design of the air suction circuit. The elevated performance of the fans and combustion head, guarantee flexibility of use and excellent working at all firing rates.

The exclusive design ensures reduced dimensions, simple use and maintenance. A wide range of accessories guarantees elevated working flexibility.



Technical Data

MODEL			RL 34 MZ	RL	44 MZ	RL 50	RL 64 MZ		
Burner operation mode					Two stage				
Modulation ratio to max.	output				2 ÷ 1				
Servomotor	type								
Servomotor	run time s	3							
	ŀ	ίW	97/154÷395	155/235÷485		148/296÷593	200/400÷820		
Heat output	1	/Ical/h	83/133÷340	133/2	204÷418	127/255÷510	172/344÷705		
	ŀ	Kg/h	8,3/13÷33,6	13/	/20÷41	12,5/25÷50	17/38÷69		
Working temperature	o	C min./max			0/40				
FUEL/AIR DATA									
Net calorific value	ŀ	(Wh/kg			11,8				
Net calorine value	ŀ	Kcal/kg			10200				
Viscosity at 20°C	r	nm²/s (cSt)			4 ÷ 6				
Diaman	type		AN 57C	1A	N 67C	AL 75C	AL 95C		
Pump	output k	g/h at 12 bar	45		67	88	107		
Atomised pressure	k	oar	12						
Oil temperature	1	Иах. °С			50				
Fan	t	уре	(02)		(01)	(02)			
Air temperature	1	Иах. °С			60				
ELECTRICAL DATA									
Electrical supply	F	Ph/Hz/V	(04)	(04)	(06)	(09)	(05)		
Auxiliary electrical supply	F	Ph/Hz/V	(04)		(04)	(03)	(03)		
Control box	t	уре			RMO 88.53				
Total electrical power	ŀ	(W	0,6	0,7	0,75	0,75	1,4		
Auxiliary electrical power	ŀ	ίW	0,3	0,28	0,3	0,10	0,3		
Protection level		P	2XD		2XD	44	44		
Power electric motor	ŀ	ίW	0,3	0,42	0,45	0,65	1,1		
Rated motor current	A	A	2,4	3	2 - 1.2	3 - 1,7	4.7 - 2.7		
Motor start current	A	A	9,6	12	9.5 - 5.5	13,8 - 8	24.5 - 14		
Motor protection level		P	20		44	54	55		
Innitian transformer	\	/1 - V2	230V - 2x12kV	230V	- 2x12kV	230V - 2x5kV	230V - 2x5kV		
Ignition transformer		1 - I2	0,2A - 30mA	0,2A	- 30mA	1,9A - 30mA	1,9A - 30mA		
Operation			(11)		(11)	(10)	(11)		
EMISSIONS									
Sound pressure	(dBA	70		72	75	76		
Sound output	\	V							
CO emission	r	ng/kWh			< 40				
Grade of smoke indicator	1	√° Bach.			< 1				
CxHy emission	r	ng/kWh	<10 (after the first 20 s.)						
NOx emission	r	ng/kWh	< 185	<	: 185	< 200	< 185		
APPROVAL									
Directive				73/23 (2006/95)	- 89/336 (2004/108)	- 98/37 - 92/42 EC			
According to					EN 267				
Certification			CE-0036 0383/07	CE-00	36 0383/07	DIN 5G226/93	CE-0036 0382/0		

- (01) Centrifugal with reverse curve blades
- (02) Centrifugal with forward curve blades
- (03) 1/50/230~(±10%)
- (04) 1/50-60/220-230~(±10%)
- (05) 3/50/230-400~(±10%)
- (06) 3/50-60/220-400~(±10%)
- (07) 3/50/400~(±10%) (08) 3/50/230~(±10%)
- (09) 3N/50/400~(±10%)人 3/50/230~(±10%) △
- (10) Intermittent (at least one stop every 24 h)
- (11) Intermittent (at least one stop every 24 h) Continuous as optional (at least one stop every 72 h)

Reference conditions:

Temperature: 20°C - Pressure: 1013,5 mbar - Altitude: 0 m a.s.l. - Noise measured at a distance of 1 meter.

Since the Company is constantly engaged in the production improvement, the aesthetic and dimensional features, the technical data, the equipment and the accessories can be changed. This document contains confidential and proprietary information of RIELLO S.p.A. Unless authorised, this information shall not be divulged, nor duplicated in whole or in part.




MODEL		RL 70	RL 100	RL 130	RL 190	RL 250 MZ		
Burner operation mode				Two stage				
Modulation ratio to max. o	output			2 ÷ 1				
Servomotor	type		-	-		LKS 210		
Servomotor	run time s		-	-		7		
	kW	255/474÷830	356/711÷1186	486/948÷1540	759/1423÷2443	600/1250÷2700		
Heat output	Mcal/h	219/408÷714	306/612÷1020	418/816÷1325	653/1224÷2100	516/1075÷2322		
	Kg/h	21,5/40÷70	30/60÷100	41/80÷130	64/120÷206	51/106÷228		
Working temperature	°C min./max			0/40				
FUEL/AIR DATA								
Net calorific value	kWh/kg			11,8				
	Kcal/kg			10200				
Viscosity at 20°C	mm²/s (cSt)			4 ÷ 6				
Pump	type	AL 95C	AJ 6CC	AJ 6CC	J7C	J7 4PT		
	output kg/h at 12 ba	r 107	164	164	230	230		
Atomised pressure	bar			12				
Oil temperature	Max. °C	(01)		50				
Fan	an type		(01)	(01)	(02)	(02)		
Air temperature	Max. °C			60				
ELECTRICAL DATA			_					
Electrical supply	Ph/Hz/V	(09)	(09)	(09)	(09)	(07)		
Auxiliary electrical supply			(03)	(03)	(03)	(03)		
Control box	type			RMO 88.53				
Total electrical power	kW	1,4	1,8	2,6	5,9	7,2		
Auxiliary electrical power	kW	0,3	0,3	0,4	1,4	0,6		
Protection level	IP	44	44	44	44	54		
Power electric motor	kW	1,1	1,5	2,2	4,5	6,6		
Rated motor current	A	4,8 - 2,8	5,9 - 3,4	8,8 - 5,1	15,8 - 9,1	14.8 - 8.5		
Motor start current	A	25 - 14,6	27,7 - 16	57,2 - 33,2	126 - 73	114 - 66		
Motor protection level	IP	54	54	54	54	55		
Ignition transformer	V1 - V2	230V - 2x5kV	230V - 2x5kV	230V - 2x5kV	230V - 2x5kV	230V - 2x5kV		
	l1 - l2	1,9A - 30mA	1,9A - 30mA	1,9A - 30mA	1,9A - 35mA	1,9A - 35mA		
Operation		(10)	(10)	(10)	(10)	(11)		
EMISSIONS								
Sound pressure	dBA	75	77	78,5	83,9	83		
Sound output	W							
CO emission	mg/kWh	< 40						
Grade of smoke indicator	N° Bach.			< 1	`			
CxHy emission	-			10 (after the first 20	1 '	105		
1.5/1111					< 200	< 185		
APPROVAL			== (00 (0000 (==)	20/200/200/1/::	22/27 22/12 77			
Directive			73/23 (2006/95) -	89/336 (2004/108) -	- 98/37 - 92/42 EC			
According to				EN 267		1 .		
Certification	CE-050790223001 in progress							

- (01) Centrifugal with reverse curve blades
- (02) Centrifugal with forward curve blades (03) 1/50/230~(±10%)
- (04) 1/50-60/220-230~(±10%)
- (05) 3/50/230-400~(±10%)
- (06) 3/50-60/220-400~(±10%)
- (07) 3/50/400~(±10%) (08) 3/50/230~(±10%)
- (09) 3N/50/400~(±10%)人 3/50/230~(±10%) △
- (10) Intermittent (at least one stop every 24 h)
- (11) Intermittent (at least one stop every 24 h) Continuous as optional (at least one stop every 72 h)

Reference conditions:

Temperature: 20°C - Pressure: 1013,5 mbar - Altitude: 0 m a.s.l. - Noise measured at a distance of 1 meter.

FIRING RATES

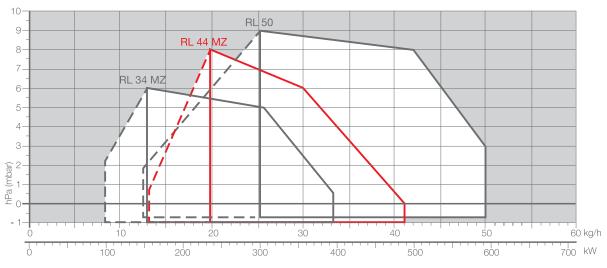





r - 1
L _ J
1st stage operating rate

Test conditions conforming to EN 267:

Temperature: 20°C Pressure: 1013,5 mbar Altitude: 0 m a.s.l.

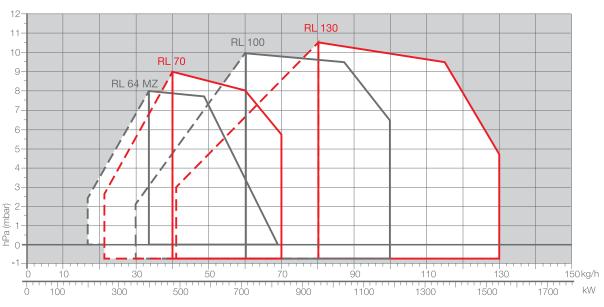

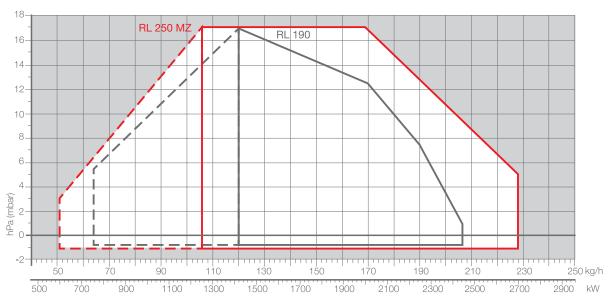



Fuel Supply

HYDRAULIC CIRCUITS

The burners are fitted with three valves (a safety valve and two oil delivery valves).

A control device, on the basis of required output, regulates oil delivery valves opening, allowing light oil passage trough the valves and the nozzle.


Delivery valves opening supplies the two-stage hydraulic ram which regulates air delivery in relation to the fuel burnt.

The pumping group is fitted whit a pump, an oil filter and a regulating valve, that adjust atomised pressure.




Example of adjustable hydraulic ram of RL 34 - 44 MZ burners.


RL 34 MZ

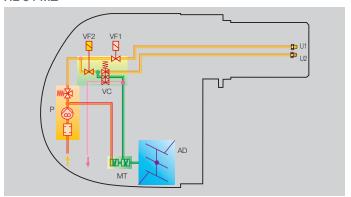


RL 70 - 100 - 130

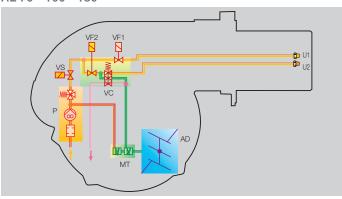


RL 250 MZ

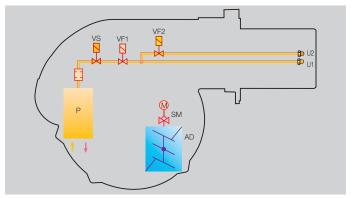

RL 44 MZ - 50 - 64 MZ

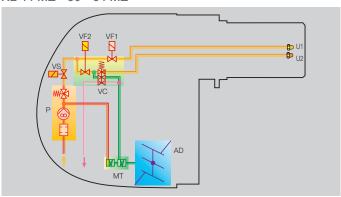

RL 190

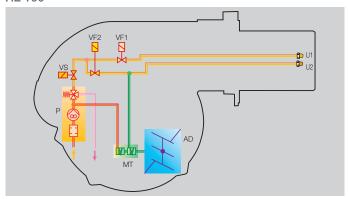

D	Pump with filter and pressure regulator on the output
	circuit
VS	Safety valve on the output circuit
VF1	1 st stage valve
VF2	2 nd stage valve
VC	2 nd stage control device
MT	Hydraulic ram
AD	Air damper
U1	1 st stage nozzle
U2	2 nd stage nozzle


DIMENSIONING OF THE FUEL SUPPLY LINES

The fuel feed must be completed with the safety devices required by the local norms.

The table shows the choice of piping diameter for the various burners, depending on the difference in height between the burner and the tank and their distance.

MAXIMUM EQUIVALENT LENGTH FOR THE PIPING L[m]

Model		RL 34 MZ	7	RL	44 - 50 N	ΜZ	RL 7	70 - 100 -	130	RL	190
Diameter piping	Ø10 mm	Ø12 mm	Ø14 mm	Ø10 mm	Ø12 mm	Ø14 mm	Ø12 mm	Ø14 mm	Ø16 mm	Ø16 mm	Ø18 mm
+H, -H (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)	L max (m)
+4,0	63	144	150	51	112	150	71	138	150	60	80
+3,0	55	127	150	46	99	150	62	122	150	50	70
+2,0	48	111	150	39	86	150	58	106	150	40	60
+1,5	44	102	150	35	79	147	51	98	150	35	55
+1,0	40	94	150	32	73	144	44	90	150	30	50
+0,5	37	86	150	29	65	132	40	82	150	25	45
0	33	78	150	26	60	120	36	74	137	20	40
-0,5	29	70	133	23	54	106	32	66	123	18	35
-1,0	25	82	118	20	47	96	28	56	109	15	30
-1,5	21	63	103	16	40	83	23	49	95	13	25
-2,0	17	45	88	13	34	71	19	42	81	10	20
-3,0	10	29	58	7	21	46	10	26	53	5	10
-4,0	4	12	28	2	8	21	3	10	25	3	6

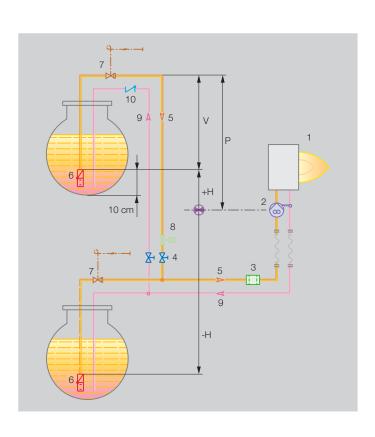

Н	Difference in height pump-foot valve
Ø	Internal pipe diameter
Р	Height 10 m
V	Height 4 m
1	Burner
2	Burner pump
3	Filter
4	Manual shut off valve
5	Suction pipework
6	Bottom valve
7	Remote controlled rapid manual shut off valve
1	(compulsory in Italy)
8	Type approved shut off solenoid valve (compulsory in Italy)
9	Return pipework
10	Check valve

With ring distribution oil systems, the feasible drawings and dimensioning are the responsibility of specialised engineering studios, who must check compatibility with the requirements and features of each single installation.



Ventilation *

The ventilation circuit produces low noise levels with high performance pressure and air output, in spite of the compact dimensions.

On RL 50-100-130 models, the use of reverse curve blades and sound proofing material keeps noise level very low.

In the RL 34 MZ-44 MZ-64 MZ-190-250 MZ models, sound has been reduced by the special design of the air suction circuit.

An hydraulic ram allows to have a right air flow in any operational moment and the closure of the air damper with burner in stand-by.



Example of the air damper on RL 50 burners.



Example of HCS (Housing Cooling System) working concept.

The RL 34 MZ and RL 44 MZ are realised with a new structure made by an innovative technology based on a new fibreglass reinforced polyamide material, with high thermal and mechanical characteristics, instead of the traditional aluminium.

This allows big advantages in terms of lay-out rationalisation, weight and dimensions reduction.

In order to guarantee the correct exercise temperature for the internal burner components in every working conditions, the new structure includes an innovative patented cooling technology.

Between the burner front base and the reinforcing steel front plate, had been create an air cavity offering an high thermal insulation against the front boiler reflection heat, and to further improve the insulation efficiency the innovative **HCS** (**Housing Cooling System**) technology had been developed. Inside the front base cavity an air circulation is activated with continuous air volume refresh to obtain an active cooling system and avoid any heat transfer to the electrical component housing.


Combustion Head

Different lengths of the combustion head can be chosen for the RL series of burners.

The choice depends on the thickness of the front panel and the type of boiler.


Depending on the type of generator, check that the penetration of the head into the combustion chamber is correct.

The internal position of the combustion head can easily be adjusted to the maximum defined output by adjusting a screw fixed to the flange.

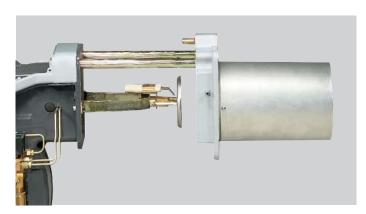


Example of a RL burner combustion head.

DIMENSIONS OF THE FLAME



Example:

Burner thermal output = 2000 kW; L flame (m) = 2,7 m (medium value); D flame (m) = 0,8 m (medium value)

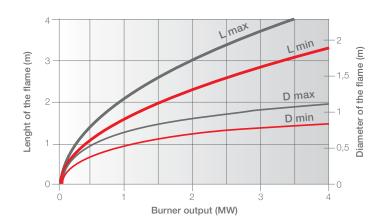




BURNER OPERATION MODE

With two stage operation, the RL burners can follow the temperature load requested by the system.

A modulation ratio of 2:1 is reached, thanks to the "two nozzles" technique; the air is adapted to the hydraulic ram positions.

On "two stage" operation, the burner gradually adjusts output to the requested level, by varying between the two pre-set levels (see picture A).

"TWO STAGE" OPERATION

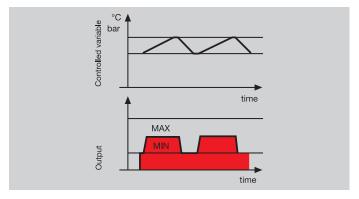

Picture A



All RL series burners are fitted with a new microprocessor control panel for the supervision during intermittent operation. For helping the commissioning and maintenance work, there are two main elements:



The lock-out reset button is the central **operating element** for resetting the burner control and for activating / deactivating the diagnostic functions.




The multi-color LED is the central **indication element** for visual diagnosis and interface diagnosis.

Both elements are located under the transparent cover of lockout reset button, as showed below.



There are two diagnostic choices, for indication of operation and diagnosis of fault cause:

VISUAL DIAGNOSIS

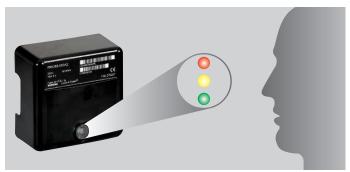

INTERFACE DIAGNOSIS

By the interface adapter and a PC with dedicated software or by a predisposed flue gas analyzer (see paragraph accessories).



INDICATION OF OPERATION

In normal operation, the various status are indicated in the form of colour codes according to the table below.

The interface diagnosis (with adapter) can be activated by pressing the lock-out button for > 3 seconds.

COLOR CODE TABLE						
Operation status	Color code table					
Stand-by	• • • • • • •					
Pre-purging						
Ignition phase	0 0 0 0 0 0 0					
Flame OK	0000000					
Poor flame	0 0 0 0 0 0 0					
Undervoltage, built-in fuse						
Fault, alarm	0000000					
Extraneous light	0 0 0 0 0 0 0					

LED off

DIAGNOSIS OF FAULT CAUSES

After lock-out has occurred, the red signal lamp is steady on. In this status, the visual fault diagnosis according to the error code table can be activated by pressing the lock-out reset button for > 3 seconds.

The interface diagnosis (with adapter) can be activated by pressing again the lock-out button for > 3 seconds.

The flashing of red LED are a signal with this sequence:

(e.g. signal with n° 3 flashes – faulty air pressure monitor)



0 s


position.

ERROR CODE TABLE

POSSIBLE CAUSE OF FAULT		FLASH CODE
No establishment of flame at the end of safety time:	 faulty or soiled fuel valves faulty or soiled flame detector poor adjustment of burner, no fuel faulty ignition equipment 	2x flashes
Faulty air pressure monitor		3x flashes
Extraneous light or simulation of flame on burner start u	р	4x flashes
Loss of flame during operation:	faulty or soiled fuel valvesfaulty or soiled flame detectorpoor adjustment of burner	7x flashes
Wiring error or internal fault		10x flashes

START UP CYCLE

RL 34 MZ - 44 MZ - 50 - 64 MZ - 70 - 100 - 130 - 190 - 250 MZ

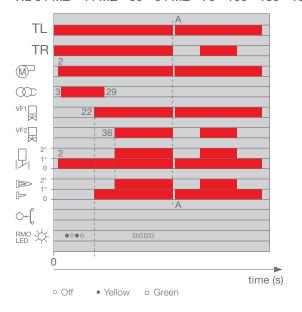

The burner begins the firing cycle: the motor and transformer are supplied; the hydraulic ram opens in the pre-purge position.

22÷29 s Ignition: the VS and VF1 valves are supplied.
36 s If the control device TR is closed or has been replaced by a jumper wire, the 2nd stage valve VF2 opens; the fuel is sprayed out through the 2nd stage nozzle and the hydraulic ram opens the air damper in the 2nd stage






All models of the RL burner series have an easily accessible control panel for the electrical components housing and wiring.

In particular the new RL 34-44 MZ models, thanks to the new structure concept, have a extremely clean electrical layout to optimise the commissioning and maintenance speed.

On these models the electrical connection are done by a Plug&Socket system, accessible from the external of the cover.

The electrical wiring of all RL burner models are very easy to do following the wiring diagrams included in the instruction handbook.

Electrical connections must be made by qualified and skilled personnel, according to the local norms.

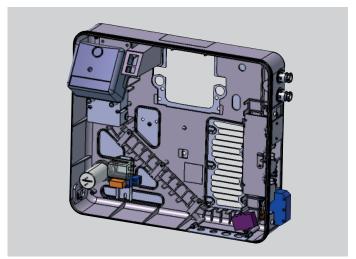



Example of electrical components housing and Plug&Socket system for electrical connection of RL 34 - 44 MZ.

The following table shows the supply lead sections and the type of fuse to be used.


MODEL	V	F (A)	L (mm²)
► RL 34 MZ	230	T6	1,5
► RL 44 MZ	230	T6	1,5
▶ RL 44 MZ	230	T6	1,5
NL 44 IVIZ	400	T6	1,5
▶ RL 50	230	T6	1,5
NL 30	400	T6	1,5
▶ RL 64 MZ	230	T10	1,5
NL 04 IVIZ	400	T6	1,5
▶ RL 70	230	T10	1,5
nL /U	400	T6	1,5


MODEL	V	F (A)	L (mm²)
▶ RL 100	230	T16	1,5
AL 100	400	T10	1,5
▶ RL 130	230	T16	1,5
nl 130	400	T10	1,5
▶ RL 190	230	T25	2,5
NL 190	400	T25	2,5
► RL 250 MZ	400	16A aM - 32A gG	4




The emission data has been measured in the various models at maximum output, according to EN 267 standard.

The NOx emissions of RL 34-44-64-250 MZ models are conforming to the class 2 of EN 267.

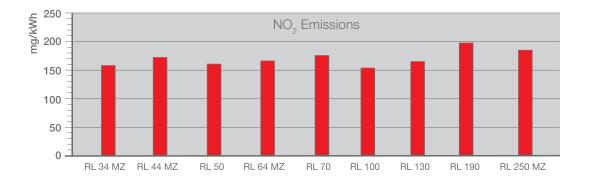

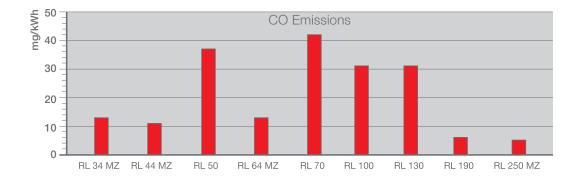

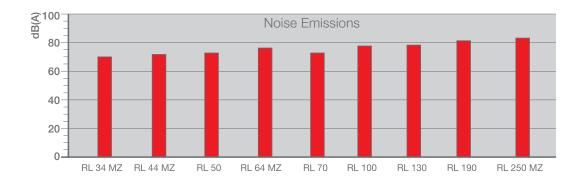





Overall Dimensions (mm)



BURNERS

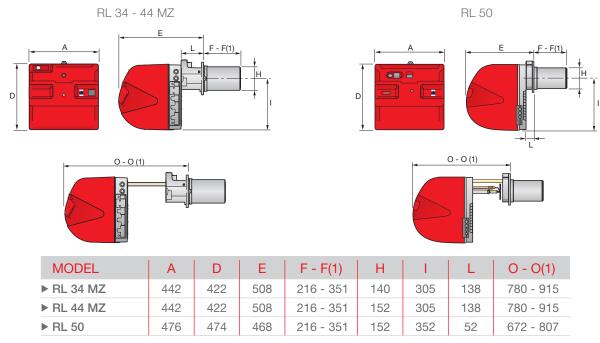

⁽¹⁾ dimension with extended head

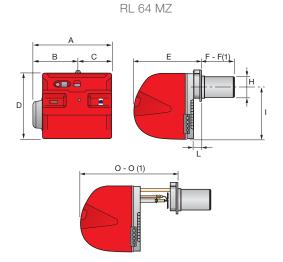


RL 70 - 100 - 130 - 190 - 250 MZ

MODEL	Α	В	С	D	Е	F - F(1)	Н	- 1	L	O - O(1)
► RL 64 MZ	538	300	238	490	477	250 - 385	179	335	60	680 - 545
▶ RL 70	580	296	284	555	680	250 - 385	179	430	-	951 - 1086
► RL 100	599	312	287	555	680	250 - 385	179	430	-	951 - 1086
► RL 130	625	338	287	555	680	250 - 385	189	430	-	951 - 1086
► RL 190	756	366	390	555	712	370	222	430	-	1166
► RL 250 MZ	910	432	478	596	705	378	222	436	-	1163


⁽¹⁾ dimension with extended head

BURNER - BOILER MOUNTING FLANGE



MODEL	D1	D2	Ø
▶ RL 34 MZ	160	224	M8
▶ RL 44 MZ	160	224	M8
▶ RL 50	160	224	M8
▶ RL 64 MZ	185	275-325	M12
▶ RL 70	185	275-325	M12
▶ RL 100	185	275-325	M12
▶ RL 130	195	275-325	M12
▶ RL 190	230	325-368	M16
▶ RL 250 MZ	230	325-368	M16

PACKAGING



MODEL	X (1)	Υ	Z	kg
► RL 34 MZ	1010	520	510	32
► RL 44 MZ	1010	520	510	33
▶ RL 50	1200	520	502	39
► RL 64 MZ	1200	560	520	42
▶ RL 70	1410	692	655	60
▶ RL 100	1410	692	655	63
► RL 130	1410	692	655	66
► RL 190	1410	985	655	75
▶ RL 250 MZ	1410	1040	655	140

(1) Length with short and extended head



Installation Description —c

Installation, start up and maintenance must be carried out by qualified and skilled personnel.

All operations must be performed in accordance with the technical handbook supplied with the burner.

BURNER SETTING

All the burners have slide bars, for easier installation and maintenance.

After drilling the boilerplate, using the supplied gasket as a template, dismantle the blast tube from the burner and fix it to the boiler.

Adjust the combustion head.

Refit the burner casing to the slide bars.

Install the nozzle, choosing this on the basis of the maximum boiler output and following the diagrams included in the burner instruction handbook.

Check the position of the electrodes.

Close the burner, sliding it up to the flange, keeping it slightly raised to avoid the flame stability disk rubbing against the blast tube.

HYDRAULIC AND ELECTRICAL CONNECTIONS AND START UP

The burners are supplied for connection to two pipes fuel supply system.

Connect the ends of the flexible pipes to the suction and return pipework using the supplied nipples.

Make the electrical connections to the burner following the wiring diagrams included in the instruction handbook.

Prime the pump by turning the motor.

On start up, check:

- Pressure pump (to max. and min.)
- Combustion quality, in terms of unburned substances and excess air.

BURNER MAINTENANCE

The maintenance of RL burners is very simple thanks to the sliding bars system that allows an easy access to the internal components.

In particular the RL 34-44 MZ models have a new sliding bars system to make easier the access to the combustion head.


The RL 190 and RL 250 MZ have new reinforced sliding bars that make very strong the burner structure during maintenance.









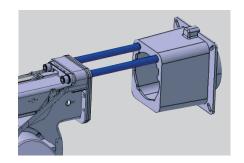

Burner Accessories

Nozzles type 60° B




The nozzles must be ordered separately. The following table shows the features and codes on the basis of the maximum required fuel output.

BURNER	GPH	RATE at 10 bar	D OUTPUT at 12 bar	(kg/h) at 14 bar	NOZZLE CODE
▶ RL 34 MZ	1,00	4,1	4,5	4,9	3042077
▶ RL 34 MZ	1,25	4,7	5,2	5,6	3042096
▶ RL 34 - 44 MZ	1,50	5,7	6,3	6,8	3042107
► RL 34 - 44 MZ	1,75	6,7	7,3	7,9	3042110
► RL 34 MZ - 44 MZ	2,00	7,7	8,5	9,2	3042126
► RL 34 MZ - 44 MZ	2,50	9,6	10,6	11,5	3042140
► RL 34 MZ - 44 MZ - 50	3,00	11,5	12,7	13,8	3042158
► RL 34 MZ - 44 MZ - 50	3,50	13,5	14,8	16,1	3042162
► RL 34 MZ - 44 MZ - 50 - 64 MZ	4,00	15,4	17	18,4	3042172
► RL 34 MZ - 44 MZ - 50 - 64 MZ	4,50	17,3	19,1	20,7	3042182
► RL 44 MZ - 50 - 64 MZ - 70	5,00	19,2	21,2	23	3042192
► RL 44 MZ - 50 - 64 MZ - 70	5,50	21,1	23,3	25,3	3042202
► RL 44 MZ - 50 - 64 MZ - 70	6,00	23,1	25,5	27,7	3042212
▶ RL 50 - 64 MZ - 70	6,50	25	27,6	30	3042222
► RL 64 MZ - 70 - 100	7,00	26,9	29,7	32,3	3042232
► RL 64 MZ - 70 - 100	7,50	28,8	31,8	34,6	3042242
► RL 64 MZ - 70 - 100	8,00	30,8	33,9	36,9	3042252
► RL 64 MZ - 70 - 100	8,50	32,7	36,1	39,2	3042262
► RL 64 MZ - 70 - 100 - 130	9,50	36,5	40,3	43,8	3042282
► RL 64 MZ - 70 - 100 - 130 - 190	10,00	38,4	42,4	46,1	3042292
► RL 64 MZ - 70 - 100 - 130 - 190	11,00	42,3	46,7	50,7	3042312
► RL 64 MZ - 100 - 130 - 190 - 250 MZ	12,00	46,1	50,9	55,3	3042322
► RL 64 MZ - 100 - 130 - 190 - 250 MZ	13,00	50	55,1	59,9	3042332
► RL 64 MZ - 100 - 130 - 190 - 250 MZ	14,00	53,8	59,4	64,5	3042352
► RL 64 MZ - 100 - 130 - 190 - 250 MZ	15,00	57,7	63,6	69,2	3042362
► RL 64 MZ - 100 - 130 - 190 - 250 MZ	16,00	61,5	67,9	73,8	3042382
► RL 64 MZ - 130 - 190 - 250 MZ	17,00	65,4	72,1	78,4	3042392
► RL 130 - 190 - 250 MZ	18,00	69,2	76,4	83	3042412
► RL 130 - 190 - 250 MZ	19,00	73	80,6	87,6	3042422
► RL 130 - 190 - 250 MZ	20,00	76,9	84,8	92,2	3042442
▶ RL 190 - 250 MZ	22,00	84,6	93,3	101,4	3042462
▶ RL 190 - 250 MZ	24,00	92,2	101,8	110,6	3042472
▶ RL 190 - 250 MZ	26,00	99,9	110,3	119,9	3042482
▶ RL 190 - 250 MZ	28,00	107,6	118,8	129,1	3042492
▶ RL 250 MZ	30,00	110,4	122	132,4	3042502
▶ RL 250 MZ	32,00	117,8	130,1	150,1	3042512
▶ RL 250 MZ	35,00	128,8	142,1	154,5	3042522



Extended heads



"Standard head" burners can be transformed into "extended head" versions, by using the special kit. The kits available for the various burners, giving the original and the extended lengths, are listed below.

BURNER	'STANDARD' HEAD LENGTH (mm)	'EXTENDED' HEAD LENGTH (mm)	KIT CODE
► RL 34 MZ	216	351	3010426
► RL 44 MZ	216	351	3010425
▶ RL 50	216	351	3010075
► RL 64 MZ	250	385	3010114
▶ RL 70	250	385	3010114
▶ RL 100	250	385	3010115
► RL 130	250	385	3010116
► RL 190	370	530	3010444
▶ RL 250 MZ	378	528	3010422

Spacer kit



If burner head penetration into the combustion chamber needs reducing, varying thickness spacers are available, as given in the following table:

BURNER	SPACER THICKNESS S (mm)	KIT CODE
► RL 34 MZ - 44 MZ - 50	90	3010095
► RL 64 MZ - 70 - 100 - 130	135	3010129
▶ RL 190 - 250 MZ	110	3000722

Sound proofing box



If noise emission needs reducing even further, sound-proofing boxes are available, as given in the following table:

BURNER	BOX TYPE	AVERAGE NOISE REDUCTION [dB(A)](*)	BOX CODE
► RL 34 MZ - 44 MZ - 50 - 70 - 100 - 130	C1/3	10	3010403
▶ RL 64 MZ - 190	C4/5	10	3010404
▶ RL 250 MZ	C7	10	3010376

(*) according to EN 15036-1 standard

Connection flange kit



A kit is available for use where the burner opening on the boiler is of excessive diameter.

BURNER	KIT CODE
► RL 34 MZ - 44 MZ - 50	3010138

Degasing unit



Biodiesel kit









Status Panel kit



Volt free contact kit



PC interface kit



With single pipe systems, you can find air in the oil sucked by the pump that comes from the oil itself due to negative pressure or to a faulty seal.

To solve this problem, we recommend fitting a degasing unit near the burner. Two versions are available with or without filter:

BURNER	DEGASING UNIT WITH FILTER CODE	DEGASING UNIT WITHOUT FILTER CODE
RL 34 MZ - 44 MZ - 50 - 64 MZ RL 70 - 100 - 130 - 190 - 250 MZ	3010055	3010054

For burning Biodiesel fuel, a special kit is available.

BURNER	KIT CODE
► RL 28 (out of catalogue model)	3010289
► RL 38 (out of catalogue model)	3010290
▶ RL 50	3010291
▶ RL 70	3010292
▶ RL 100	3010358
▶ RL 130	3010358
▶ RL 190	-

The RL burners can be equipped with an exclusive electronic device "Status Panel" which continuously monitors and displays all the burner operational modes and picks up any anomalies during the operational cycle.

BURNER	KIT CODE
► RL 50 - 64 MZ - 70 - 100 - 130 - 190 - 250 MZ	3010322

A volt free contact kit is available for installation onto the burner. It can be used for a remote interface between burner operating signals.

Every burner can be equipped with a single kit to remote the flame presence signal or the burner lockout indication.

BURNER	KIT CODE
▶ RL 34 MZ - 44 MZ - 64 MZ	3010419

To connect the flame control panel to a personal computer for the transmission of operation, fault signals and detailed service information, an interface adapter with PC software are available.

BURNER	KIT CODE
► RL 34 MZ - 44 MZ - 50 - 64 MZ - 70 - 100 - 130 - 190 - 250 MZ	3002719




Ground fault interrupter kit



A "Ground fault interrupter kit" is available as a safety device for electrical system fault.

BURNER	KIT CODE
▶ RL 34 MZ - 44 MZ	3010448


Post-ventilation kit

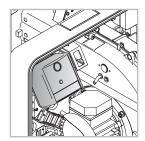

To have 20 s ventilation after opening of thermostats chain, a special kit is available.

BURNER	KIT CODE
▶ RL 34 MZ - 44 MZ	3010453

Hours counter kit

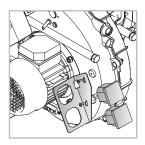


To measure the burner working time a hours counter kit is available.

BURNER	KIT CODE
▶ RL 34 MZ - 44 MZ	3010450

Specification

DESIGNATION OF SERIES

A specific index guides your choice of burner from the various models available in the RL series. Below is a clear and detailed specification description of the product.

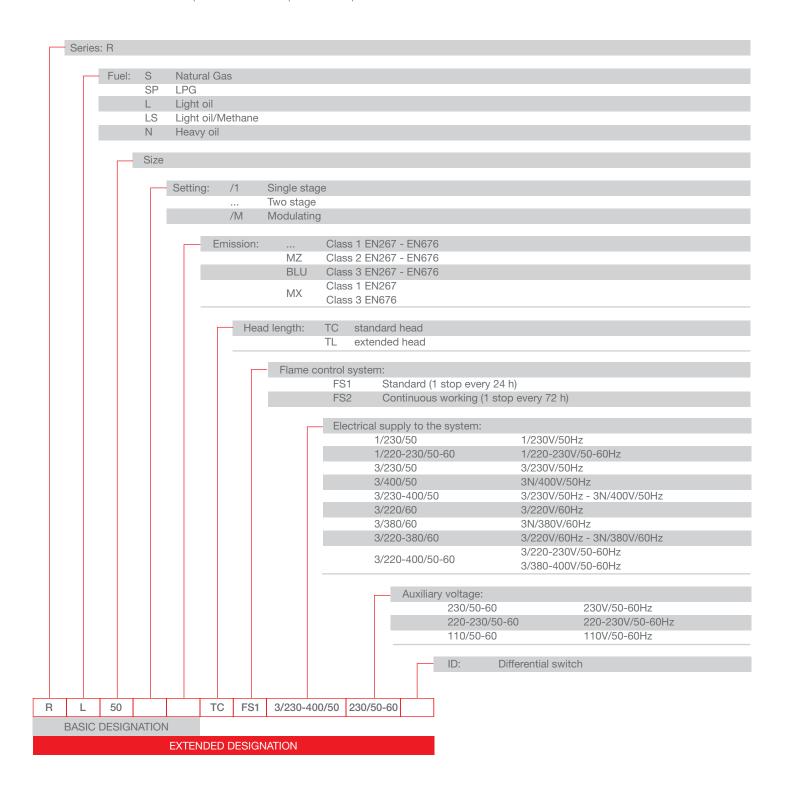



AVAILABLE BURNER MODELS

RL 34 MZ	TC	FS1	1/220-230/50/60	220-230/50-60
RL 34 MZ	TL	FS1	1/220-230/50/60	220-230/50-60
RL 44 MZ	TC	FS1	1/220-230/50/60	220-230/50-60
RL 44 MZ	TL	FS1	1/220-230/50/60	220-230/50-60
RL 44 MZ	TC	FS1	3/220-400/50/60	220-230/50-60
RL 44 MZ	TL	FS1	3/220-400/50/60	220-230/50-60
DI 50				
RL 50	TC	FS1	3/230-400/50	230/50-60
RL 50	TL	FS1	3/230-400/50	230/50-60
RL 50	TC	FS1	3/230-400/50	230/50-60
RL 50	TL	FS1	3/230-400/50	230/50-60
RL 50	TC	FS1	3/220-230/380-400/60	230/50-60
RL 50	TL	FS1	3/220-230/380-400/60	230/50-60
RL 50	TC	FS1	3/254-265/440-460/60	230/50-60
RL 50	TL	FS1	3/254-265/440-460/60	230/50-60
RL 64 MZ	TC	FS1	3/230-400/50	230/50-60
RL 64 MZ	TL	FS1	3/230-400/50	230/50-60
RL 70	TC	FS1	3/230-400/50	230/50-60
RL 70	TL	FS1	3/230-400/50	230/50-60
RL 70	TC	FS1	3/230-400/50	230/50-60
RL 70	TL	FS1	3/230-400/50	230/50-60
RL 70	TC	FS1	3/220-230/380-400/60	230/50-60
RL 70	TL	FS1	3/220-230/380-400/60	230/50-60
RL 70	TC	FS1	3/254-265/440-460/60	230/50-60
RL 70	TL	FS1	3/254-265/440-460/60	230/50-60
RL 100	TC	FS1	3/230-400/50	230/50-60
RL 100	TL	FS1	3/230-400/50	230/50-60
RL 100	TC	FS1	3/230-400/50	230/50-60
RL 100	TL	FS1	3/230-400/50	230/50-60
RL 100	TC	FS1	3/220-230/380-400/60	230/50-60
RL 100	TL	FS1	3/220-230/380-400/60	230/50-60
RL 100	TC	FS1	3/254-265/440-460/60	230/50-60
RL 100	TL	FS1	3/254-265/440-460/60	230/50-60
RL 130	TC	FS1	3/230-400/50	230/50-60
RL 130	TL	FS1	3/230-400/50	230/50-60
RL 130	TC	FS1	3/230-400/50	230/50-60
RL 130	TL	FS1	3/230-400/50	230/50-60
RL 130	TC	FS1	3/220-230/380-400/60	230/50-60
RL 130	TL	FS1	3/220-230/380-400/60	230/50-60
RL 130	TC	FS1	3/254-265/440-460/60	230/50-60
RL 130	TL	FS1	3/254-265/440-460/60	230/50-60
RL 190	TC	FS1	3/230-400/50	230/50-60
RL 190	TC	FS1	3/220-230/380-400/60	230/50-60
RL 190	TC	FS1	3/254-265/440-460/60	230/50-60
RL 250 MZ	TC	FS1	3/400/50	230/50-60

Other versions are available on request.

PRODUCT SPECIFICATION

RL 34 MZ - 44 MZ models

Burner

Monoblock forced draught oil burner (light oil or blend of light oil and biodiesel up to 5%) with two stage operation, fully automatic, made up of:

- Air suction circuit
- High performance fan with straight blades
- Air damper for air setting controlled by an adjustable hydraulic ram
- Starting motor at 2800 rpm, single-phase / 220-230V / 50-60Hz or three-phase 380-400V / 50-60Hz
- Combustion head, that can be set on the basis of required output, fitted with:
 - stainless steel end cone, resistant to corrosion and high temperatures
 - ignition electrodes
 - flame stability disk
- Exclusive patented HĆS (Housing Cooling System) with high thermal insulation and air circulation with continuous air volume refresh for an active cooling system and avoid heat transfer to the electrical component housing
- Gears pump for high pressure fuel supply, fitted with:
 - filter
 - pressure regulator
 - connections for installing a pressure gauge and vacuometer
 - internal by-pass for single pipe installation
- Valve unit with an oil safety valve and two delivery oil valves on the output circuit
- Photocell for flame detection
- Microprocessor-based flame control panel, with diagnostic function
- Plugs and Sockets for electrical connection, accessible from the external of the cover
- Burner on/off switch
- Flame inspection window
- 1st 2nd stage manual switch
- Slide bars for easier installation and maintenance
- Protection filter against radio interference
- IP 44 electric protection level.

Conforming to:

- 89/336 (2004/108) EC directive (electromagnetic compatibility)
- 73/23 (2006/95) EC directive (low voltage)
- 92/42/EC directive (performance)
- 98/37/EC directive (machinery)
- EN 267 (liquid fuel burners).

Standard equipment:

- 2 flexible pipes for connection to the oil supply network
- 2 gaskets for the flexible pipes
- 2 nipples for connection to the pump
- 4 screws for fixing the burner flange to the boiler
- 1 thermal screen
- 2 Plugs for electrical connection (RL 34-44 MZ single-phase)
- 3 Plugs for electrical connection (RL 44 MZ three-phase)
- 2 slide bar extensions (for the extended head models)
- Instruction handbook for installation, use and maintenance
- Spare parts catalogue.

Available accessories to be ordered separately:

- Nozzles
- Head extension kit
- Head length reduction kit
- Sound-proofing box
- Connection flange kit
- Degasing unit (with or without filter)
- Biodiesel kit
- Status panel kit
- Volt free contact kit
- PC interface kit
- Ground fault interrupter
- Post-ventilation kit
- Hours counter kit.



RL 50 - 64 MZ - 70 - 100 - 130 - 190 - 250 MZ models

Burner

Monoblock forced draught oil burner (light oil or blend of light oil and biodiesel up to 5%) with two stage operation, fully automatic, made up of:

- Air suction circuit lined with sound-proofing material
- Fan with reverse curve blades (RL 50 70 100 130 models) or straight blades (RL 64 MZ 190 250 MZ models)
- Air damper for air setting controlled by an adjustable hydraulic ram (or by a servomotor for the RL 250 MZ)
- Starting motor at 2800 rpm, three-phase 400V with neutral, 50Hz
- Combustion head, that can be set on the basis of required output, fitted with:
 - stainless steel end cone, resistant to corrosion and high temperatures
 - ignition electrodes
 - flame stability disk
- Gears pump for high pressure fuel supply, fitted with:
 - filter
 - pressure regulator
 - connections for installing a pressure gauge and vacuometer
 - internal by-pass for single pipe installation
- Valve unit with an oil safety valve and two delivery oil valves on the output circuit
- Photocell for flame detection
- Microprocessor-based flame control panel, with diagnostic function
- Burner on/off switch
- Flame inspection window
- 1st 2nd stage manual switch
- Slide bars for easier installation and maintenance
- Protection filter against radio interference
- IP 44 electric protection level.

Conforming to:

- 89/336 (2004/108) EC directive (electromagnetic compatibility)
- 73/23 (2006/95) EC directive (low voltage)
- 92/42/EC directive (performance)
- 98/37/EC directive (machinery)
- EN 267 (liquid fuel burners).

Standard equipment:

- 2 flexible pipes for connection to the oil supply network
- 2 gaskets for the flexible pipes
- 2 nipples for connection to the pump
- 4 screws for fixing the burner flange to the boiler
- 1 thermal screen
- Fairleads for electrical connections (RL 50 models)
- 2 slide bar extensions (for the extended head models and the RL 190 250 MZ models)
- Instruction handbook for installation, use and maintenance
- Spare parts catalogue.

Available accessories to be ordered separately:

- Nozzles
- Head extension kit
- Head length reduction kit
- Sound-proofing box
- Degasing unit (with or without filter)
- Biodiesel kit
- Connection flange kit
- Status panel kit
- PC interface kit.

RIELLO S.p.A.

Via Ing. Pilade Riello, 5 37045 Legnago (VR) Italy Tel. +39.0442.630111 - Fax +39.0442.21980 www.rielloburners.com - info@rielloburners.com

